

ROLLER CHAIN BREAKER


MADE IN U.S.A.

FOR #120 through #160 CHAINS

1 1/2" through 2" pitch • #24B through #32B

SOLD THROUGH MANUFACTURERS, WHOLESALE DISTRIBUTORS OR JOBBERS

TAKE THESE CHAINS APART EASILY WITHOUT THE USE
OF HAMMERS AND PUNCHES

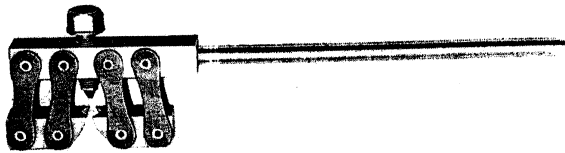

*Will work on Single and Multiple Strand Chain



DISASSEMBLY SEQUENCE:

1. Place jaws of tool over roller with push-out pin centered on chain pin.
2. Tighten down by turning top handle clockwise until chain pin loosens, driving it partially through the link plate.
Caution - Do not force pin all the way through link plate as pin plate will bend and damage roller link.
3. Follow same procedure on other pin of the same pin link forcing pin through pin plate.
4. Return to original pin and force completely through pin plate freeing link plate from the pins.
5. Remove disassembled pin link from the chain.

Tips are made of Tool Steel. To remove tip for replacement use pliers or heat tip (approx. 300°) and shake out. Insert new tip with pellets supplied.

ESTABLISHED 1947

PATTON TOOL CO., INC. 67 Mainline Drive • Westfield, MA 01085
Tel (413) 564-5255 • Fax (413) 564-0018

Web Site: www.pattontool.com • E-mail: patton-tool@worldnet.att.net